
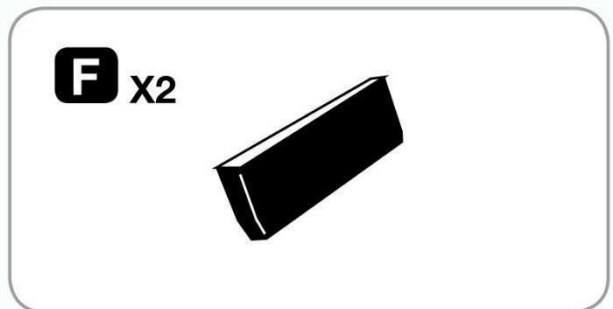
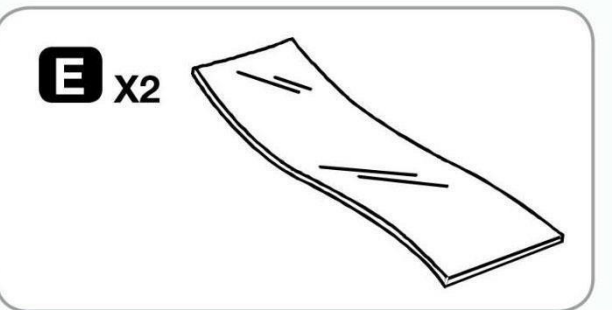
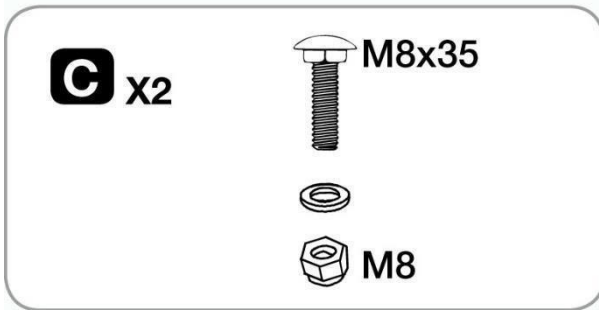
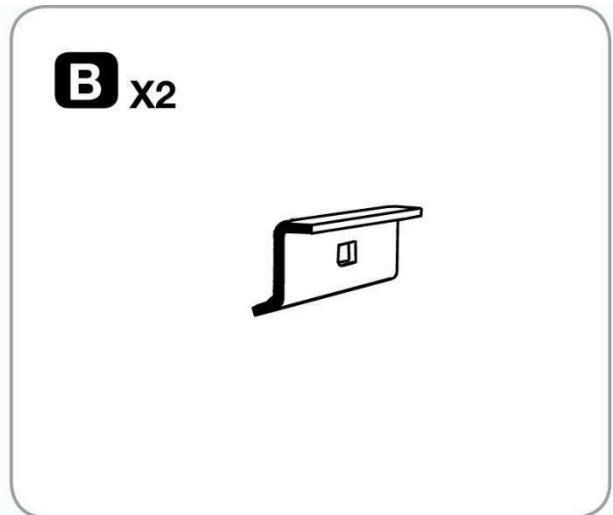



ARB/Sunseeker Bracket Installation VW T3 Kit

Hardware Included

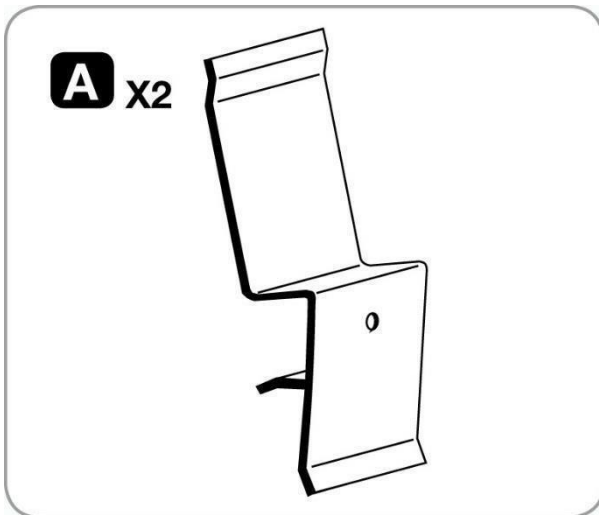

Installation of Brackets on Vehicle

Torque to 10 lb/ft paying attention to the bracket and rain gutter to ensure that neither is starting to bend or deflect. If you notice any bending or deflection, you have gone too far.

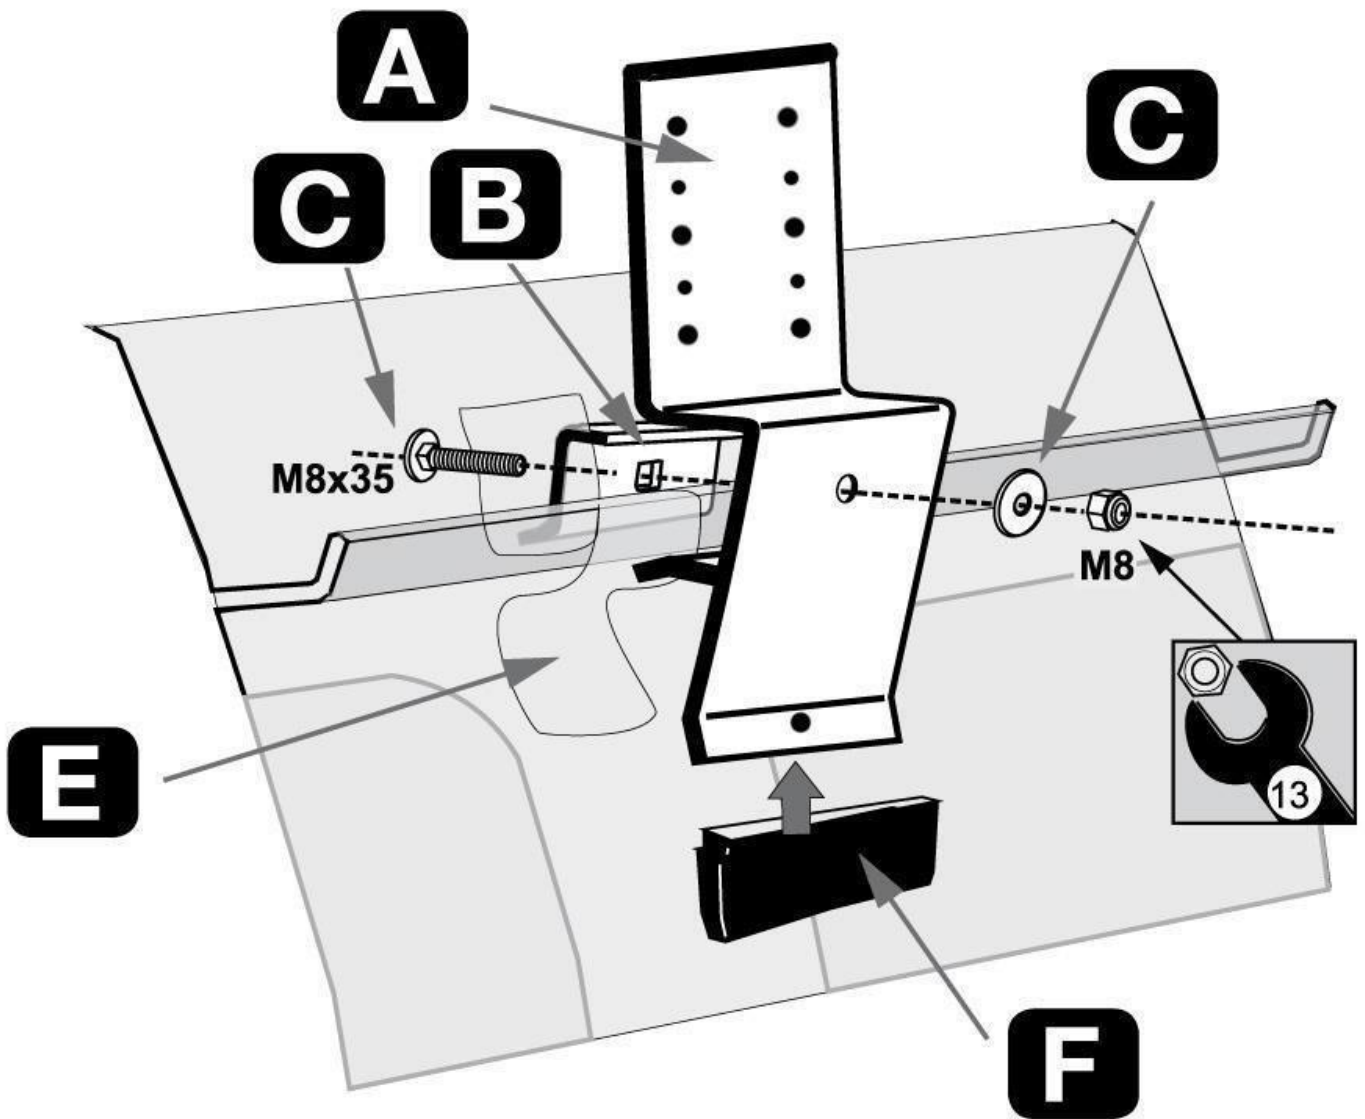

Note: The larger leg of the small bracket sits in the gutter.